



External I2C can operate on voltages from 0.9 - 5V level I2C Signals if VCC_B is connected to an external voltage source
 If VCC_B is connected to U_I2C, I2C-Level is jumper selectable from 3.3 and 5Volts

Factory Notice:
 DNP = Do not populate this part!

	Technologie 2000 GmbH	Zeichner HGoebkes	Blatt 4 von 11
Änderung	13.12.15 13:54	Titel	
Ausgabe	13.12.15 13:57	Interfaces / SD-Card / JTAG	
Datei	R2T2_V2_A20.T3001	Projekt R2T2	